



---

INSTRUCTION MANUAL  
**Fencedogs™**

**BENCHDOGS**


**WHAT'S IN THE KIT**

2 x Fencedogs ◀

2 x Thumbscrews ◀

2 x Low profile hex bolts ◀

2 x T-Nuts ◀

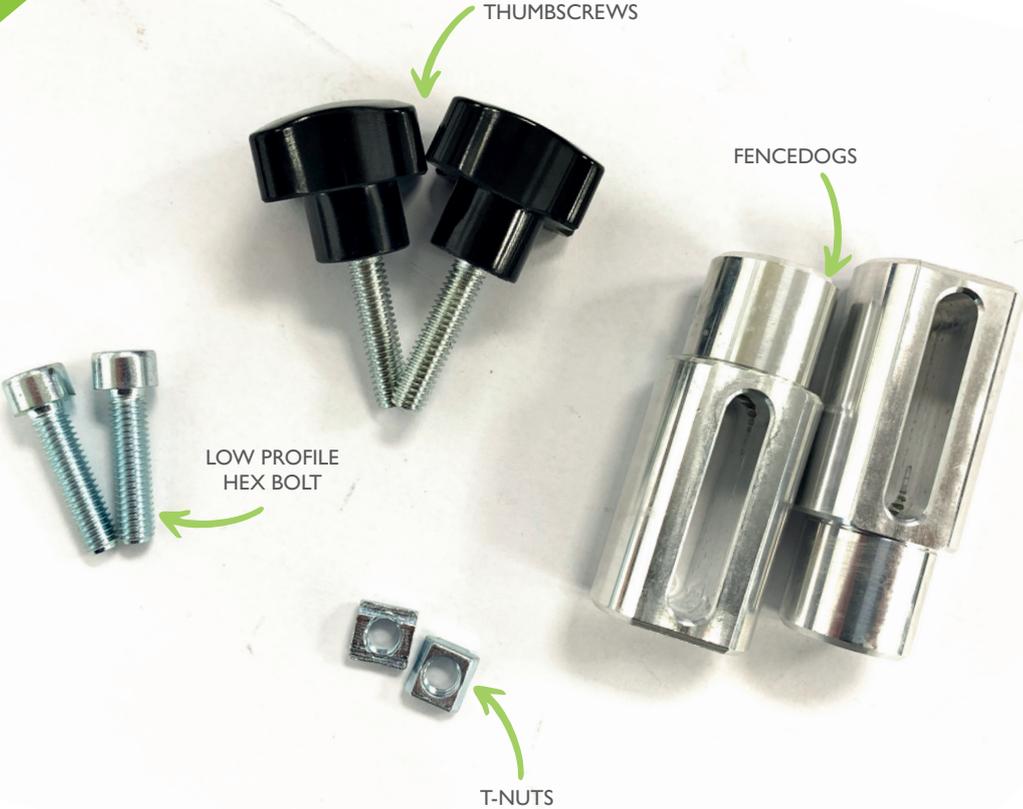

## STEP 1



Slide the t-nut into the fence as shown below and screw the Fence Dog into the t-nut using the thumbscrew.



## STEP 2




Slide the Fence Dog along the fence to desired position and place into your MFT hole.

## STEP 1



Slide the t-nut into the thin side of the fence as shown below and screw the Fence Dog into the t-nut using the low profile hex bolt.

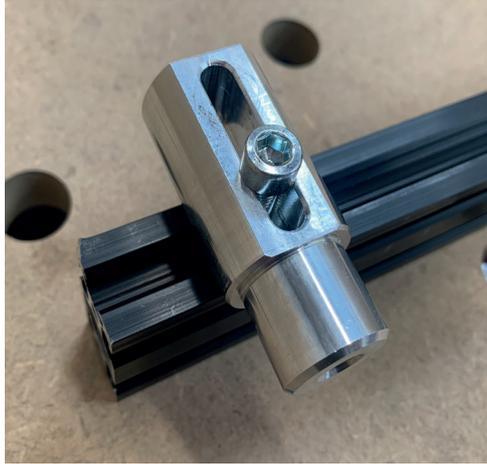

## STEP 2



Slide the Fence Dog along the fence to desired position and place into your MFT hole.



# BENCHDOGS

*Bringing precision to your work*



[WWW.BENCHDOGS.CO.UK](http://WWW.BENCHDOGS.CO.UK)

MADE IN BRITAIN